


STC


PROCEDURE FOR CHANGING THE LOCKING POSITION OF LOGOUT VALVE

VALVE BODY


VALVE HANDLE

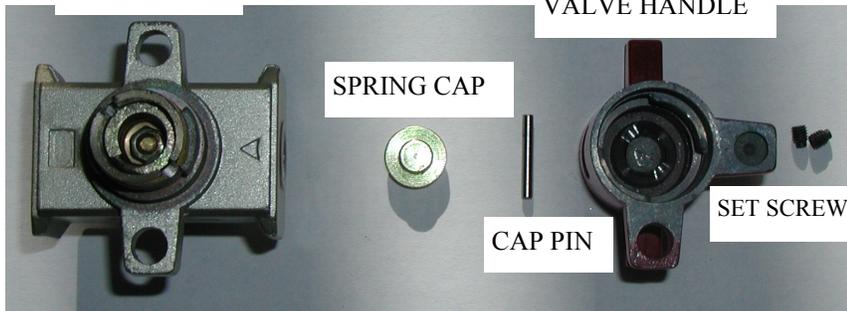

FOLLOW THE STEPS AS SHOWN BELOW FOR CHANGING THE LOCKING POSITION OF LOGOUT VALVE:

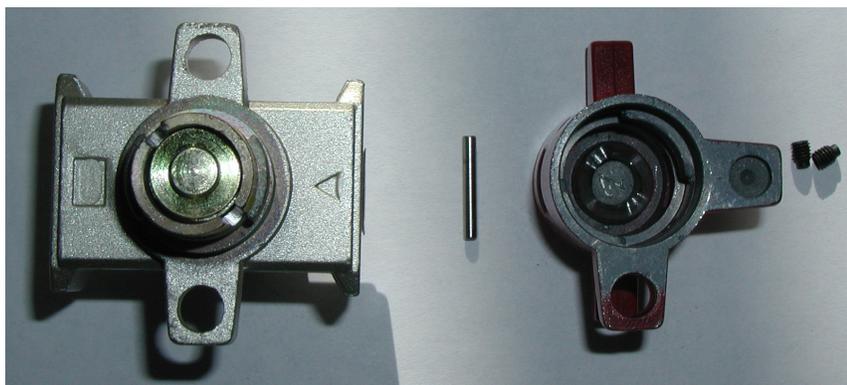

1. PUT SPRING CAP ON TOP OF THE SPRING HOUSED INSIDE THE VALVE BODY

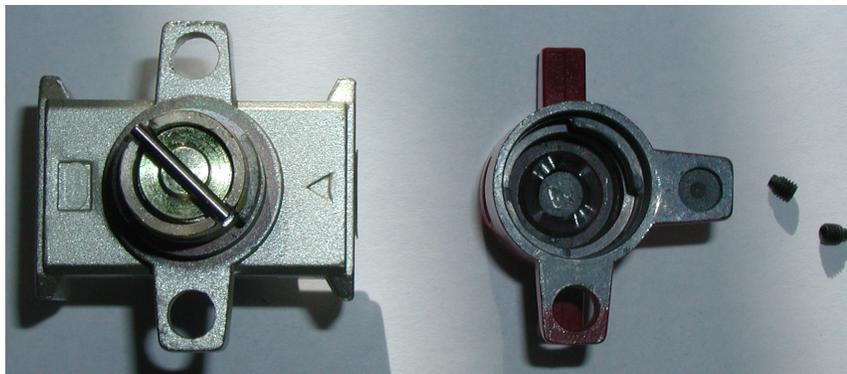

2. PUT CAP PIN ON TOP OF THE SPRING CAP AND ALIGN WITH THE SLOT OF THE VALVE BODY



3. PUT VALVE HANDLE ONTO THE VALE WITH THE HANDLE AT A 45 OR 135 DEGREE (DEPENDING ON THE PREFERED LOCKING POSITION), THEN PRESS IT DOWN.

4. INSTALL THE SET SCREWS AND TEST FOR PROPER OPERATION.

5. REVERSE THE STEPS FOR DISASSEMBLING THE LOGOUTVALVE